# AIDARY

User manual Heat Press Machine

AP2431

# Introduction

A heat press machine is using temperature and pressure with a certain amount of time to transfer images on items, the transfer is permanently embedded into the product.

## **Package Contents**

1 × Heat Press Machine 1 x User Manual

# **Product Structure**



1. Start Button	4. Heat Platen
2. Emergency Button	5.Slide-out Base
3. LCD Controller	6.Sponge

# **1.Printing Methods**

1. Make sure the power plug is well connected to the wall socket, then press the power

switch to turn on.

2. Set the temperature and the time you want

#### **1.Set temperature**

SV	Contraction of the second s
	sv 10 s 10
SET 🔽 🔺 TIMER	SET 🔽 🔼 TIMER
	SET ▼ ▲ THER arrows button "▲"or "▼" to adjust ③Pr

#### 2.Set time

PV G	PV	C	PV	ם ככ
» <b>(D</b>	SV	10	SV	
SET 💌 🔺 THER	SET 🔽		SET	
		It's the default setting of	@Press " SET '	" button one more time to exit

- 3. The buzzer will sound when the temperature reaches the setting temperature, place items(e.g. T-shirt) on the bottom plate.
- 4. Press the start button, the machine starts working automatically.
- 5. When the scheduled time is up, the machine will lift up automatically, then the transfer work is finished.
- 6. Press the emergency button if meet some emergent situation.

# 2.Maintain Note:

- 1. Different item will require different temperature and time setting because the materials or thickness is different.
- 2. This machine is not suitable for children to use or for food processing.
- 3. Please turn off the machine and unplug the power cord when the machine is not in use.
- 4. The heat plate will automatically cool down to the room temperature if the heat press stays non-use for more than 30 minutes.

# 4.Troubleshooting:

#### No action after turn on the machine.

- 1. Check the plug whether it connects well or whether it is broken.
- 2. Check the fuse whether it has been burnt out.

3. Check the power switch or digital controller whether it is broken.

## Indicating light is on but the display screen is black.

Check the 5 cable of railway transformer. The connection is poor if it is loose, just fix it. The transformer may be faulty if the cable is well connected just fix it.

### The display screen is working well but the temperature is not heating up.

- 1. Check if the indicating light of solid-state relay is on, if not, please check whether the relay or digital controller is broken.
- 2. The heat platen still can't heating up if you already changed the new solid-state relay, please check whether the heat plate is faulty or the heat plate's power cable is loose, if so, it will need to change a new heatplate.

#### The temperature is out of control: Set temperature 180°C (356°F), but the actual temperature is above 200°C(392°F)

- 1. It means the solid-state relay is broken, out of control, need to change a new relay.
- 2. Or the digital controller is faulty, need to change controller.

## The print color is pale or faded image

The pressure is not high enough or The temperature is too low / pressing time is too short. Please adjust the pressure/ temperature or increase the heating time.

## The print color is too Darkened, deep or blurred image

The temperature is too high / or pressing time is too long. Please adjust the temperature or reduce the heating time.

## The print color is different/ partial transfer effect is not good enough

Pressing time is too short/ using poor guality transfer paper. Please increase the heating time or use high guality transfer paper.

## The transfer paper stick to the object after transfer

The temperature is too high / use poor quality printing transfer paper Please adjust the temperature or use high quality transfer paper.

Fujian Aidary Applance Co.,Ltd

info@heatpresscn.com

🕅 No.318,Bailong Area, Minhou,Fuzhou,Fujian, China.350018

www.aidary.com



https://www.facebook.com/heatpresscn

http://www.voutube.com/user/heatpresscn

